
	VI-BYOD-01 Installation	
Release Date: 08.05.2020	Models Affected:	Service Document
Prepared by: Oliver Duke	VI-BYOD-01	SD- 86


<input checked="" type="checkbox"/> Assembly instructions	<input type="checkbox"/> Installer Alert	<input type="checkbox"/> Parts Manual
<input type="checkbox"/> Service Bulletin	<input type="checkbox"/> Service Manual	<input type="checkbox"/> Software
<input type="checkbox"/> Product information	<input type="checkbox"/> Trouble Shooting	

Part number	Description
VI-BYOD-01	Universal tablet tray and handlebar bracket for IC567


Required tools: 2.5mm & 3mm Allen key

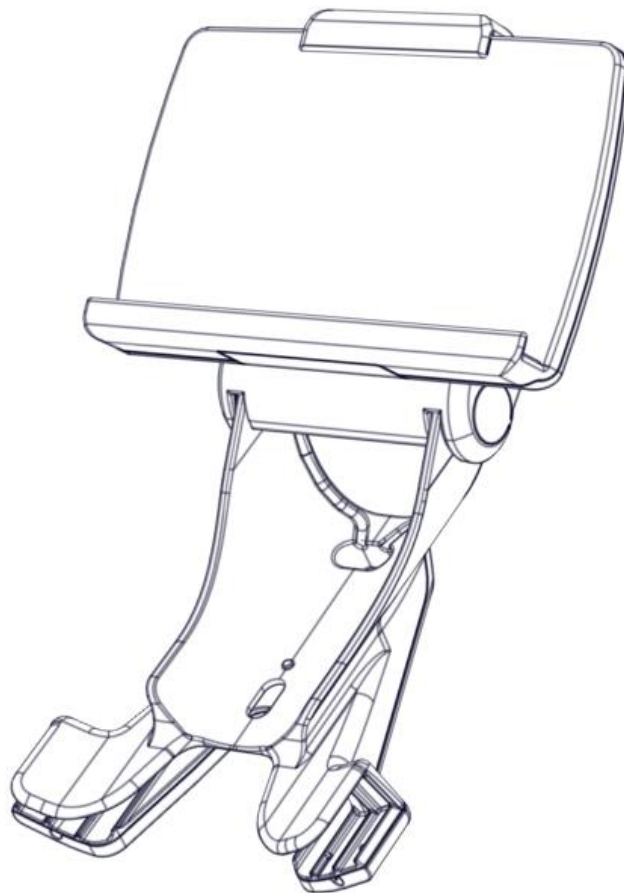


1. Remove the bolt and both spacers between the handlebar and console with a 3 mm Allen key.

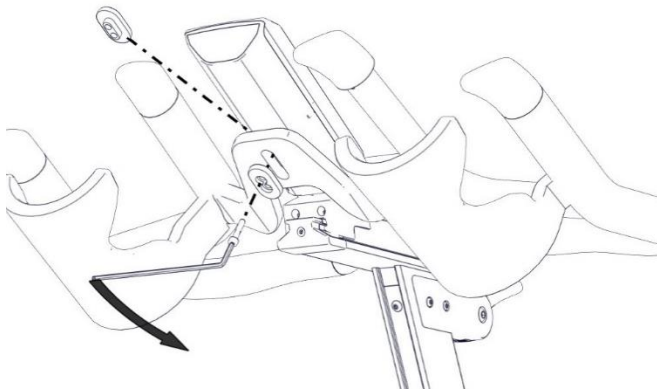


3. Carefully slide the bracket on the handlebar.

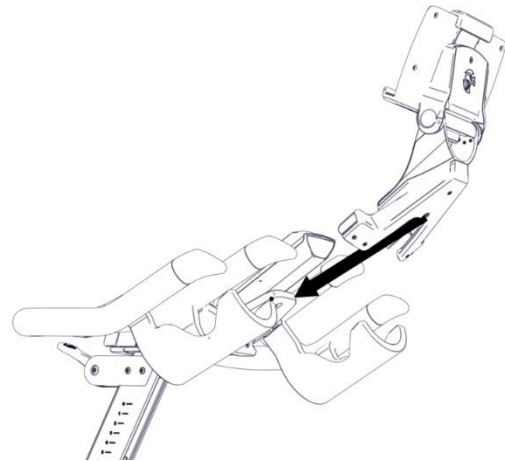


2. Remove the bolt from the BYOD bracket with a 2.5mm Allen key. The bolt will be used to fix the bracket to the handlebar at a later point.

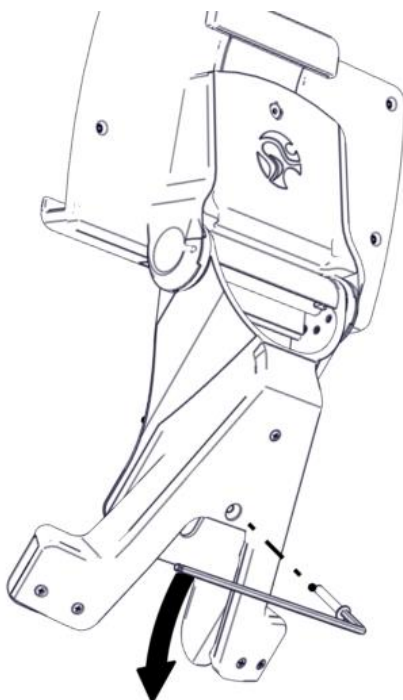

4. The BYOD bracket will fit snugly on the handle bar and over the console as depicted below.

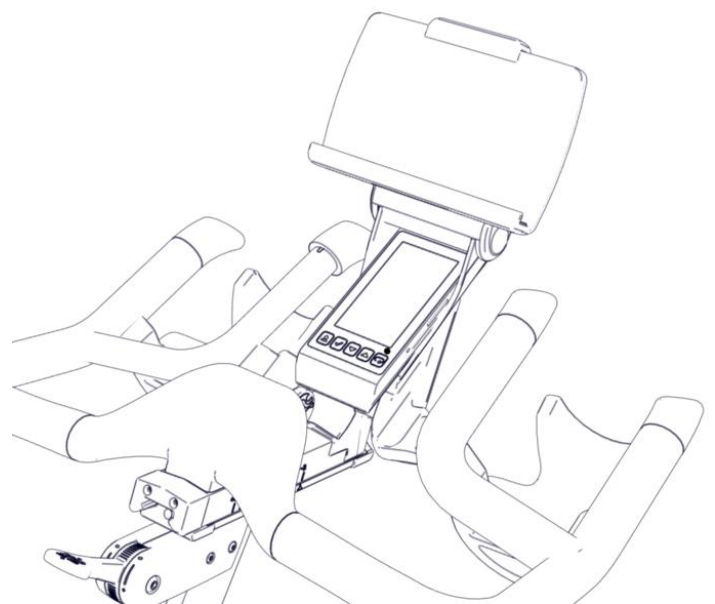

5. Hand tighten the bracket using the removed bolt from step 2 with a 2.5mm Allen key.

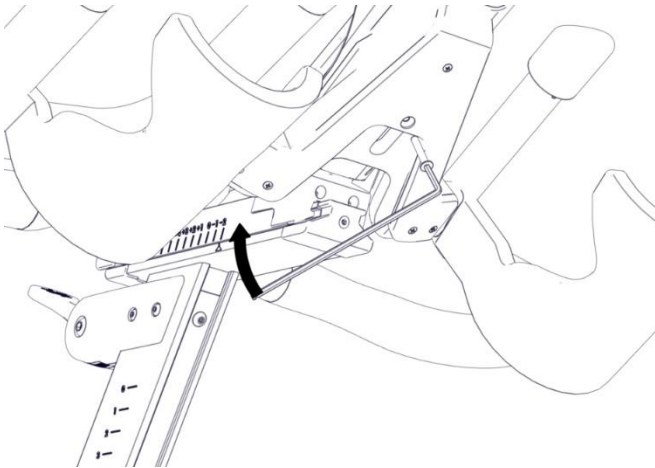

Assembly completed.